

EN Please read the safety instructions before use

FR Lire attentivement le mode d'emploi ainsi que les consignes de sécurité avant toute utilisation.

DE Bitte lesen Sie die Gebrauchsanweisung sowie die Sicherheitshinweise vor der Benutzung des Geräts aufmerksam durch.

NL Lees eerst zorgvuldig alle veiligheidsvoorschriften voor ieder gebruik.

IT Prima di qualsiasi uso prendere atto delle istruzioni di sicurezza.

ES Antes de cualquier utilización, lea las instrucciones de seguridad.

PT Leia atentamente o manual de instruções antes da primeira utilização

EL Αλληλεγγύηστη την οδηγίας ασφαλείας πριν από κάθε χρήση.

1. GENERAL DESCRIPTION

- A: Plug
- B: LED display: 5 temperature positions + temperature locking
- C: +/- button to reduce/increase temperature
- D: ON/OFF switch
- E: Straightening plates, Ceramic/Titanium coating
- F: Rotatable power cord outlet
- G: Power supply cord
- H: Lock System (to lock and unlock the tongs)
- I: IONIC system

2. SAFETY INSTRUCTIONS

- * For your safety, this appliance complies with the applicable standards and regulations (Low Voltage Directive, Electromagnetic Compatibility, Environmental...).
- * The appliance's accessories must be very hot during use. Avoid coming into contact with them as they may burn you if they ever comes into contact with the hot parts of the appliance.
- * Check that the voltage of your electricity supply matches the voltage of your appliance. Any error when connecting the appliance can damage it.
- * As an additional safety measure, we recommend the installation of a residual current difference device in the electrical circuit supplying the power unit acting at more than 30 mA. Ask your electrician for advice.
- * The installation of the appliance and its use must however comply with the standards in force in your country.
- * Caution! If you use your appliance with wet hands or near water contact in bath tubs, showers, sinks or other containers...
- * When using the appliance in the bathroom, unplug it after use as the steam from the shower may pose a danger even when the appliance is turned off.
- * This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- * If the appliance has been repaired, it must be checked by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- * Stop using your appliance and contact an Authorised Service Centre if:
 - your appliance has fallen;
 - it does not work correctly;
 - the plug or cord has been unplugged;
 - before cleaning and maintenance procedures.
- * Unplug your appliance and contact a Centre Service Agréé si:
 - it is not working correctly;
 - it is not working even momentarily;
 - Do not use if the cord is damaged.
 - Do not immerse or put under running water, even for cleaning purposes.
 - Do not hold with damp hands.
 - Do not plug by pulling on the cord, rather pull out by the plug.
 - Do not use an electrical extension lead.
 - Do not clean with abrasive or corrosive products.
 - Do not use at temperatures below 0 °C and above 35°C.

GUARANTEE: Your appliance is designed for domestic use only. It should not be used for professional purposes. The guarantee becomes null and void in the case of improper usage.

3. BRINGING INTO SERVICE

- 1. Lock System (Fig. 1): To open the clamps, pull the Lock System back. To lock the clamps: close the clamps and push the "Lock System" to the right.
- 2. Plug the appliance.
- 3. Set the ON/OFF switch to position I (D).
- 4. Your appliance will heat up very quickly (ready to use in less than 30 seconds) and the temperature will remain stable throughout the entire time (Fig. 3).
- 5. Select the ideal temperature for your hair using the +/- buttons (Fig. 3); press the – button to reduce the temperature or the + button to increase it. The temperature indicator flashes until the set temperature is reached.
- 6. After use: Place ON/OFF (D) switch in the stop position (0), close the clamps, unplug the "Lock System", unplug the appliance and leave it cool down completely before putting it away.

To help you decide the most suitable straightening temperature for your hair, here's a guide:

- * The temperature is set in green: from 130°C to 200°C (130 - 150 - 170 - 200) for fragile, fine, coloured or discoloured hair.
- * The temperature is displayed in red: 230°C for healthy, resistant, robust hair.

Note: To avoid any handling error (inadvertently pressing the +/- buttons during this) this appliance is equipped with a locking function.

If you wish to lock your temperature setting during use, press the + or - button for 2 seconds. Your setting is being locked, a padlock appears on the screen.

If you want to change your appliance's temperature, you will need to wait for it to stop pressing the + or - button for 2 seconds. Your setting is being unlocked, the padlock disappears from the screen. You can change the temperature by pressing the buttons +/-.

Automatic cut out: For safety the appliance will cut out automatically after 60 min. If you wish to turn it on again follow the instructions given in SWITTING ON.

4. USE

- 4.1 How should you straighten your hair?

Hair must be untangled, clean and dry.
• Do not use the appliance on synthetic hair (wigs, extensions, etc.).

• Form a small lock a few centimetres in width, comb it and place it between the plates. Hold the hair firmly between the plates and slide the appliance slowly from the roots to the tip of the hair.

• The ceramic coating on the plates protects your hair against overheating by uniformly spreading the heat.

• Wait for the smoothed hair to cool down before styling.

- 4.2 How should you curl your hair?

Professional hairdresser's technique for easily styling from the root to the end of the hair:

1) Firmly hold a section of hair between the plates, close to the roots. (Fig. 4)

2) Whilst combining to apply pressure to the hair section, gently turn the section 180° counter-clockwise. (Fig. 5)

3) Slide from the root to the end. (Fig. 6)

4) Remove the straightener, the curl will take shape.

5. MAINTENANCE

CAUTION! Always unplug your appliance and allow it to cool before cleaning it.

* To clean the appliance, unplug it and then wipe with a damp cloth and dry with a dry cloth.

6. ENVIRONMENT PROTECTION FIRST

Your appliance contains valuable materials which can be recovered or recycled.

Leave it at a local civic waste collection point.

7. IF YOU ENCOUNTER A PROBLEM

You are not happy with the result you're getting from your straightener:

- Press the straightener plates more firmly against your hair section.

- Slowly straighten your hair more slowly.

* It's impossible to change the temperature?

- Check that the temperature level isn't locked.

* The straightener automatically switches off after a while:

- This is quite normal; the straightener has an automatic switch-off system. Please refer to the paragraph on "automatic switch-off".

* The straightener is not heating up:

- The straightener is fitted with a mobile plate to get better results from your straightener.

* The straightener automatically switches off after a while:

- This is quite normal; the straightener is fitted with a mobile plate to get better results from your straightener.

* The straightener automatically switches off after a while:

- This is quite normal; the straightener has an automatic switch-off system. Please refer to the paragraph on "automatic switch-off".

* The straightener is not heating up:

- The straightener is fitted with a mobile plate to get better results from your straightener.

* The straightener automatically switches off after a while:

- This is quite normal; the straightener has an automatic switch-off system. Please refer to the paragraph on "automatic switch-off".

* The straightener is not heating up:

- The straightener is fitted with a mobile plate to get better results from your straightener.

* The straightener automatically switches off after a while:

- This is quite normal; the straightener has an automatic switch-off system. Please refer to the paragraph on "automatic switch-off".

* The straightener is not heating up:

- The straightener is fitted with a mobile plate to get better results from your straightener.

* The straightener automatically switches off after a while:

- This is quite normal; the straightener has an automatic switch-off system. Please refer to the paragraph on "automatic switch-off".

* The straightener is not heating up:

- The straightener is fitted with a mobile plate to get better results from your straightener.

* The straightener automatically switches off after a while:

- This is quite normal; the straightener has an automatic switch-off system. Please refer to the paragraph on "automatic switch-off".

* The straightener is not heating up:

- The straightener is fitted with a mobile plate to get better results from your straightener.

* The straightener automatically switches off after a while:

- This is quite normal; the straightener has an automatic switch-off system. Please refer to the paragraph on "automatic switch-off".

* The straightener is not heating up:

- The straightener is fitted with a mobile plate to get better results from your straightener.

* The straightener automatically switches off after a while:

- This is quite normal; the straightener has an automatic switch-off system. Please refer to the paragraph on "automatic switch-off".

* The straightener is not heating up:

- The straightener is fitted with a mobile plate to get better results from your straightener.

* The straightener automatically switches off after a while:

- This is quite normal; the straightener has an automatic switch-off system. Please refer to the paragraph on "automatic switch-off".

* The straightener is not heating up:

- The straightener is fitted with a mobile plate to get better results from your straightener.

* The straightener automatically switches off after a while:

- This is quite normal; the straightener has an automatic switch-off system. Please refer to the paragraph on "automatic switch-off".

* The straightener is not heating up:

- The straightener is fitted with a mobile plate to get better results from your straightener.

* The straightener automatically switches off after a while:

- This is quite normal; the straightener has an automatic switch-off system. Please refer to the paragraph on "automatic switch-off".

* The straightener is not heating up:

- The straightener is fitted with a mobile plate to get better results from your straightener.

* The straightener automatically switches off after a while:

- This is quite normal; the straightener has an automatic switch-off system. Please refer to the paragraph on "automatic switch-off".

* The straightener is not heating up:

- The straightener is fitted with a mobile plate to get better results from your straightener.

* The straightener automatically switches off after a while:

- This is quite normal; the straightener has an automatic switch-off system. Please refer to the paragraph on "automatic switch-off".

* The straightener is not heating up:

- The straightener is fitted with a mobile plate to get better results from your straightener.

* The straightener automatically switches off after a while:

- This is quite normal; the straightener has an automatic switch-off system. Please refer to the paragraph on "automatic switch-off".

* The straightener is not heating up:

- The straightener is fitted with a mobile plate to get better results from your straightener.

* The straightener automatically switches off after a while:

- This is quite normal; the straightener has an automatic switch-off system. Please refer to the paragraph on "automatic switch-off".

* The straightener is not heating up:

- The straightener is fitted with a mobile plate to get better results from your straightener.

* The straightener automatically switches off after a while:

- This is quite normal; the straightener has an automatic switch-off system. Please refer to the paragraph on "automatic switch-off".

* The straightener is not heating up:

- The straightener is fitted with a mobile plate to get better results from your straightener.

* The straightener automatically switches off after a while:

- This is quite normal; the straightener has an automatic switch-off system. Please refer to the paragraph on "automatic switch-off".

* The straightener is not heating up:

- The straightener is fitted with a mobile plate to get better results from your straightener.

* The straightener automatically switches off after a while:

- This is quite normal; the straightener has an automatic switch-off system. Please refer to the paragraph on "automatic switch-off".

* The straightener is not heating up:

- The straightener is fitted with a mobile plate to get better results from your straightener.

* The straightener automatically switches off after a while:

- This is quite normal; the straightener has an automatic switch-off system. Please refer to the paragraph on "automatic switch-off".

* The straightener is not heating up:

- The straightener is fitted with a mobile plate to get better results from your straightener.

* The straightener automatically switches off after a while:

- This is quite normal; the straightener has an automatic switch-off system. Please refer to the paragraph on "automatic switch-off".

* The straightener is not heating up:

- The straightener is fitted with a mobile plate to get better results from your straightener.

* The straightener automatically switches off after a while:

- This is quite normal; the straightener has an automatic switch-off system. Please refer to the paragraph on "automatic switch-off".

* The straightener is not heating up:

- The straightener is fitted with a mobile plate to get better results from your straightener.

* The straightener automatically switches off after a while:

- This is quite normal; the straightener has an automatic switch-off system. Please refer to the paragraph on "automatic switch-off".

* The straightener is not heating up:

- The straightener is fitted with a mobile plate to get better results from your straightener.

* The straightener automatically switches off after a while:

